


## 5. REMOTE CONTROLLER

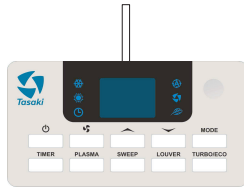

Display DT08



Remote LCD 5.2

### 1. Introduction

The following describes the features and functional specifications of the controller for cool and cool for wireless and wire models. Each set of controller consists of

- Main PCB Board for wireless and wire.
- Display DT08 unit for wire.
- Remote LCD 5.2 unit.
- 8 cores 2 m. cable connected from Main to Display Board for wireless.
- 2 cores 4 m. cable connected from Main to Display DT08 unit for wire.


#### Note :

- Room & Freeze sensors are 1 m. length.
- Deice sensors are 9.3 m. length

### 2. User's features

The following features can be operated by the buttons on the Remote LCD5.2 or Display DT08 unit.


#### 2.1 Power on/off

Press POWER  button will turn on the air conditioner or vice versa.(except the sleep and timer On/Off function which will be canceled).

- For Remote LCD 5.2 unit .When turn on, it will operate according to the setting shown on the Remote unit. The POWER LED on the Display wireless unit will lit.
- For Display DT08 unit.When turn on, it will operate according to the setting shown on the Display unit. The Room Temp on the Display unit will lit.


#### 2.2 Fan

 
##### 2.2.1 On Remote LCD5.2

Press FAN  button to select the fan speed (high, medium, low or auto mode). The display on the Remote unit will show the status.




##### 2.2.2 On Display DT08

Press FAN  button to select the fan speed (high, medium, low or auto mode). The display on the Remote unit will show the status.




#### Auto mode

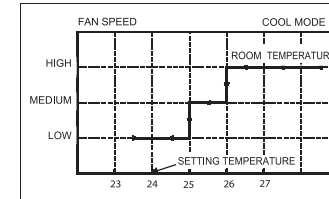

When the fan speed is put in auto mode, the speed will be adjusted automatically according to

- If the difference is 3°C or more, the speed is high.
- If the difference is 2°C, the speed is medium.
- If the difference is 1°C or less, the speed is low.

### 2.3 Operating mode

 


By Pressing MODE  button on Remote LCD5.2 and Display DT08 unit,the air conditioner can be put in



REMOTE 5.2 and DT08

### 2.4 Temperature setting





The setting temperature can be set in the range of 15-30°C(58-88°F)

- Remote LCD 5.2 Press  button The LCD on the Remote unit will show the setting temperature.
- Display DT08 Press TEMP  or  button on the Display unit will show the setting temperature.

### 2.5 Clock

To set the clock on the remote unit



- Press ,  will blink up at the LCD.
- Press  to set the time.
- Press  to confirm the setting time.